



**250 PSI**  
**RETRACTABLE**

## Features

- SAF·T·FLO retractable injection quills are engineered for safety and reliability.
- These high quality injection quills are optimal for injecting a chemical solution into a pressurized water main or process piping system.
- Retractable feature allows operators to safely remove and insert the injection quill, while under system pressure. Consult Saf-T-Flo for insertion and extraction instructions.
- Water main or process pipe may require shutdown based on system pressure.




Please contact our Asia Pacific distributor:

**H2O Rx**

Phone: 0409 784 236  
Email: info@h2orx.com.au

[www.h2orx.com.au](http://www.h2orx.com.au)  
PO Box 748, Lane Cove NSW 1595

250 PSI  
RETRACTABLE

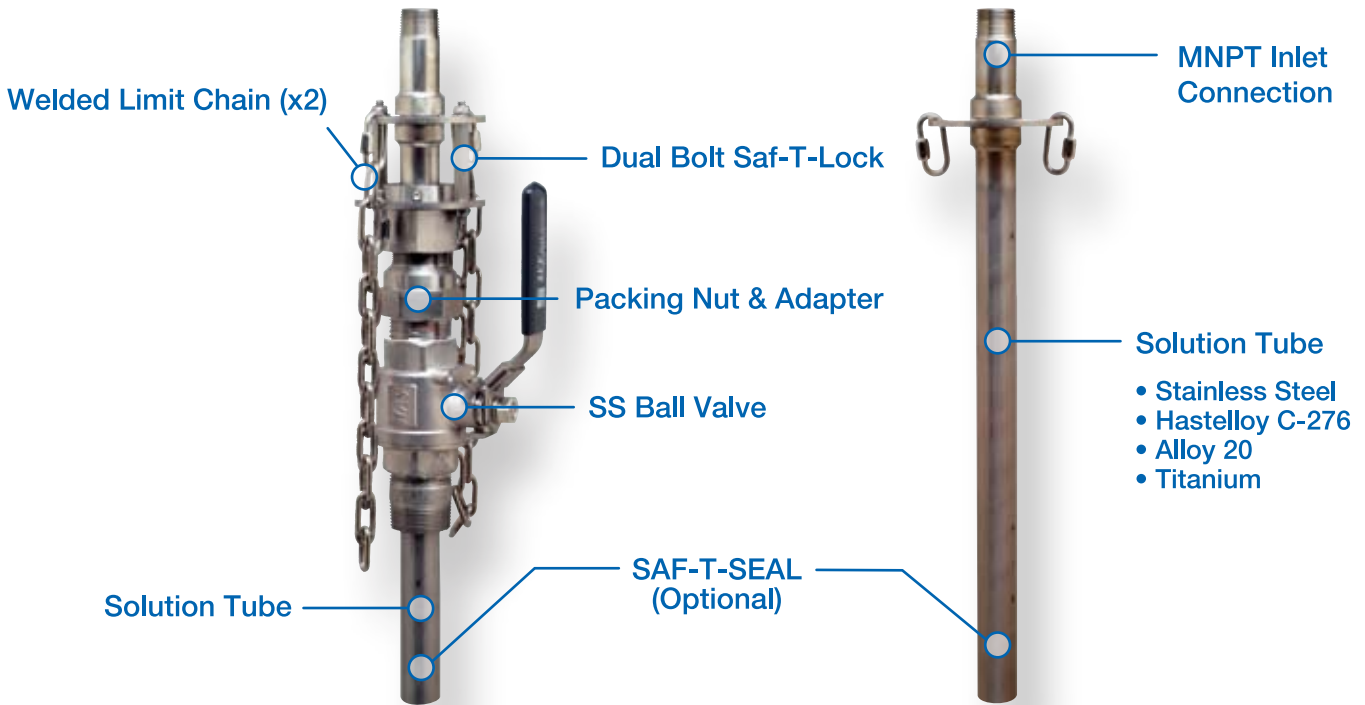

Main Connection Size	Material of Construction	Solution Tube Diameter	Max. Length	Check Valve Available	Saf-T-Seal Tip Available	Base Model Number
3/4" NPT	SS	3/8"	6"	Optional	Yes	EB-168
1" NPT	SS	1/2"	6"	Optional	Yes	EB-155
1-1/4" NPT	SS	3/4"	8"	Optional	n/a	EB-147
1-1/2" NPT	SS	1"	10"	Optional	n/a	EB-148
2" NPT	SS	1-1/2"	12"	Optional	n/a	EB-150
2-1/2" NPT	SS	2"	12"	Optional	n/a	EB-153
3" NPT	SS	2-1/2"	12"	Optional	n/a	EB-151

\* Max length is for PVC or CPVC solution tubes

\*\* Consult Saf-T-Flo when using a PVC or CPVC solution tube

Standard unit includes; SS ball valve, solution tube with plain tip, dual bolt Saf-T-Lock restraint system, and dual welded steel limit chains.

### Features

- Stainless Steel Ball Valve
- Dual Bolt Saf-T-Lock Restraint System
- Preset Welded Steel Limit Chains
- Tip Configuration
  1. Plain Tip
  2. Bevel Tip with Alignment Arrow
  3. SAF-T-SEAL
- Diffuser (Optional)
- Check Valve (Optional)

### Maintenance

- Periodically remove solution tube to check for internal or exterior chemical build-up
- Apply grease to the compression o-ring
- Re-apply Anti-Seize to Adapter/Packing Nut threads

### Other Saf-T-Flo Models

- 150 psi rated Retractable Injection Quills
- ALL PVC Retractable Injection Quills
- Non-Retractable Injection Quills
- Retractable Flanged Injectors
- Sampling Probes



Please contact our Asia Pacific distributor:

## H2O Rx

Phone: 0409 784 236  
Email: info@h2orx.com.au

www.h2orx.com.au  
PO Box 748, Lane Cove NSW 1595