

Installation Instruction

Non-Retractable Sampling Probes

IMPORTANT NOTICE – READ CAREFULLY BEFORE INSTALLATION

This sampling probe is designed to draw off a fluid sample from a pressurized water/process main. The following precautions should be taken to ensure proper and safe installation.


Precautions:

- *Become familiar with the components of this injector as listed.*
- *Make sure to use the correct hex when using a wrench to install.*

Installation Instructions

CAUTION: TAKE CARE NOT TO OVERTIGHTEN PVC HOUSINGS. DAMAGE CAUSED BY OVERTIGHTENING VOIDS WARRANTY.

1. Apply Teflon thread tape or suitable sealant to the *Main Connection Thread* of the injector.
2. Thread the sampling probe into the main using the lower hex (*See Component 4*) into the service tap.
3. Connect sampling line to outlet thread.

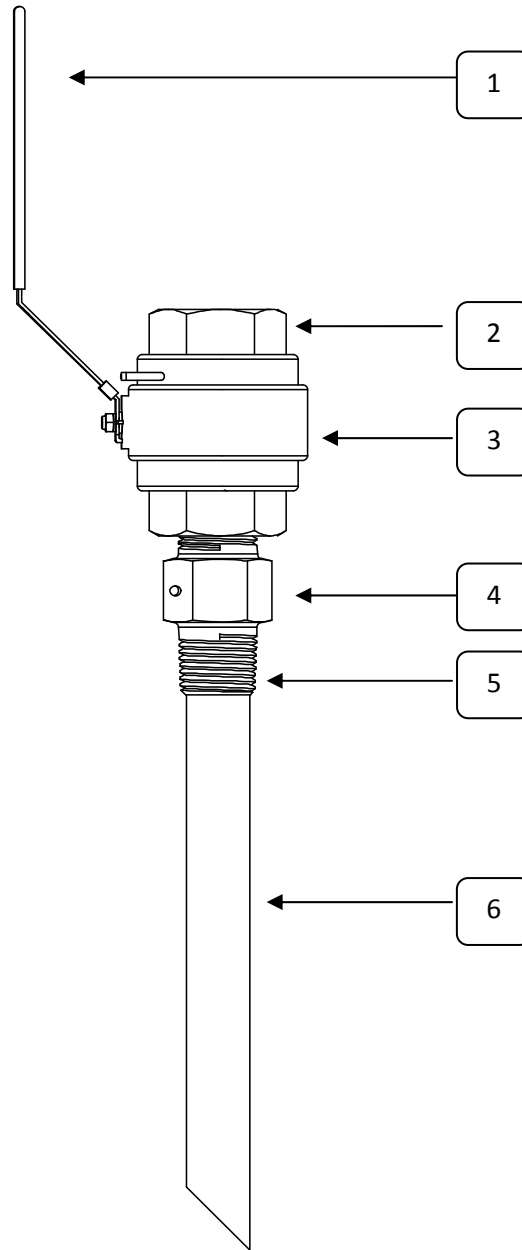

Components

1. Sample Valve Handel (SS Valve Option Shown)
2. Sample Outlet
3. Isolation Ball Valve
4. Installation Hex, use to tighten during install
5. Main Connection Thread
6. Sample Quill

WARRANTY - READ BEFORE INSTALLING

All merchandise is warranted to be free from defects in material and factory workmanship. We will provide free of charge new products in equal quantities for any that prove defective within one year from date of shipment from our factory. Manufacturer shall not be liable for any loss, damage, or injury, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of product for his intended use and user assumes all risk and liability whatever in connection therewith. No claims for labor or consequential damage will be allowed. The foregoing may not be changed except by agreement signed by an officer of the manufacturer.

DAMAGE CAUSED BY IMPROPER TOOLS OR HANDLING WILL VOID THE WARRANTY

**For installation questions and assistance
contact customer service at
1-800-957-2383.**



INSTRUCTION MANUAL

**Non-Retractable Sampling Probes
150psi rated – PVC/CPVC Models
1500psi rated – Alloy Models**

Applies to EB-108 and EB-109 Series



Please contact our Asia Pacific distributor:

H2O Rx

Phone: 0409 784 236 or 0421 795 353

info@h2orx.com.au

www.h2orx.com.au